



ecodek® Care and Maintenance Schedule

ecodek® is inherently a very low maintenance product.

To keep your ecodek® in tip top condition we advise you use our recommended (WPC) Wood Polymer Deck cleaner at least twice a year (More in heavy use areas or areas subjected to high levels of contamination).

Make up the cleaning solution as directed on the bottle and apply to the surface of the deck using a soft mop (or very soft nylon bristle brush) and gently work into the surface. Allow the solution to sit for 15 – 20 minutes.

Go over the surface again with any remaining solution and immediately rinse off the solution using a garden hosepipe ensuring all the solution is removed. **Do not be tempted to use a jet wash.** Using our recommended WPC cleaner and a common garden hose is more than enough to clean and restore your ecodek® and you may risk damaging the deck surface due to the high pressure some jet wash machines can produce.

If you discover any difficult to remove stains, please contact our technical department for advice on how best to remove it. Please do not use a jet-wash or harsh chemicals as they may cause damage to the surface. If you see dark spots on the surface of the deck, it may be the start of a mould/fungal infection. It is very important you apply an anti-fungal solution to the surface immediately to prevent any infection spreading. Anti-fungal deck/patio washes are readily available from any DIY store; however we do recommend Simply Gone (See website for details) as this has been proven to be very effective in eradicating localised surface mould, fungal and algae growth. Once applied, allow at least 6 – 8 weeks to see results (don't be concerned about re-applying if you feel it is needed).

If ecodek® is situated in an area that is prone to algae/mould growth it is recommended you apply Simply Gone to the surface of the deck twice a year. Simply apply using a watering can or pressure spray and leave to dry (It really is that easy). Preferably once in Spring and once in the Autumn. This will ensure any mould/Fungal spores cannot get established on the surface of ecodek®.

While applying, please keep young children and pets away from the area that is being treated. Once the solution has dried the area will be safe to use as normal including after rainfall or washing of the surface.

Simply Gone or any other anti-fungal washes are harmful to aquatic life and must not be allowed to enter ponds and any other water system. Be kind to the environment and store any remaining solution until needed.

ecodek® is an inherently low maintenance product if you follow the above advice and will give you many years of service. If any ecodek® boards become damaged from heavy impact it will need to be replaced with a spare. If a board should become scratched, gouged, chipped please contact the Quality Department direct on 01978 667 840 or customer care@ecodek.co.uk for advice on how best to repair the damage.

If you have any questions or concerns regarding ecodek®, please contact us direct and we will be more than happy to discuss them with you.