


How to fit **ecodek**® hollow post to 6" x 2" softwood frame.

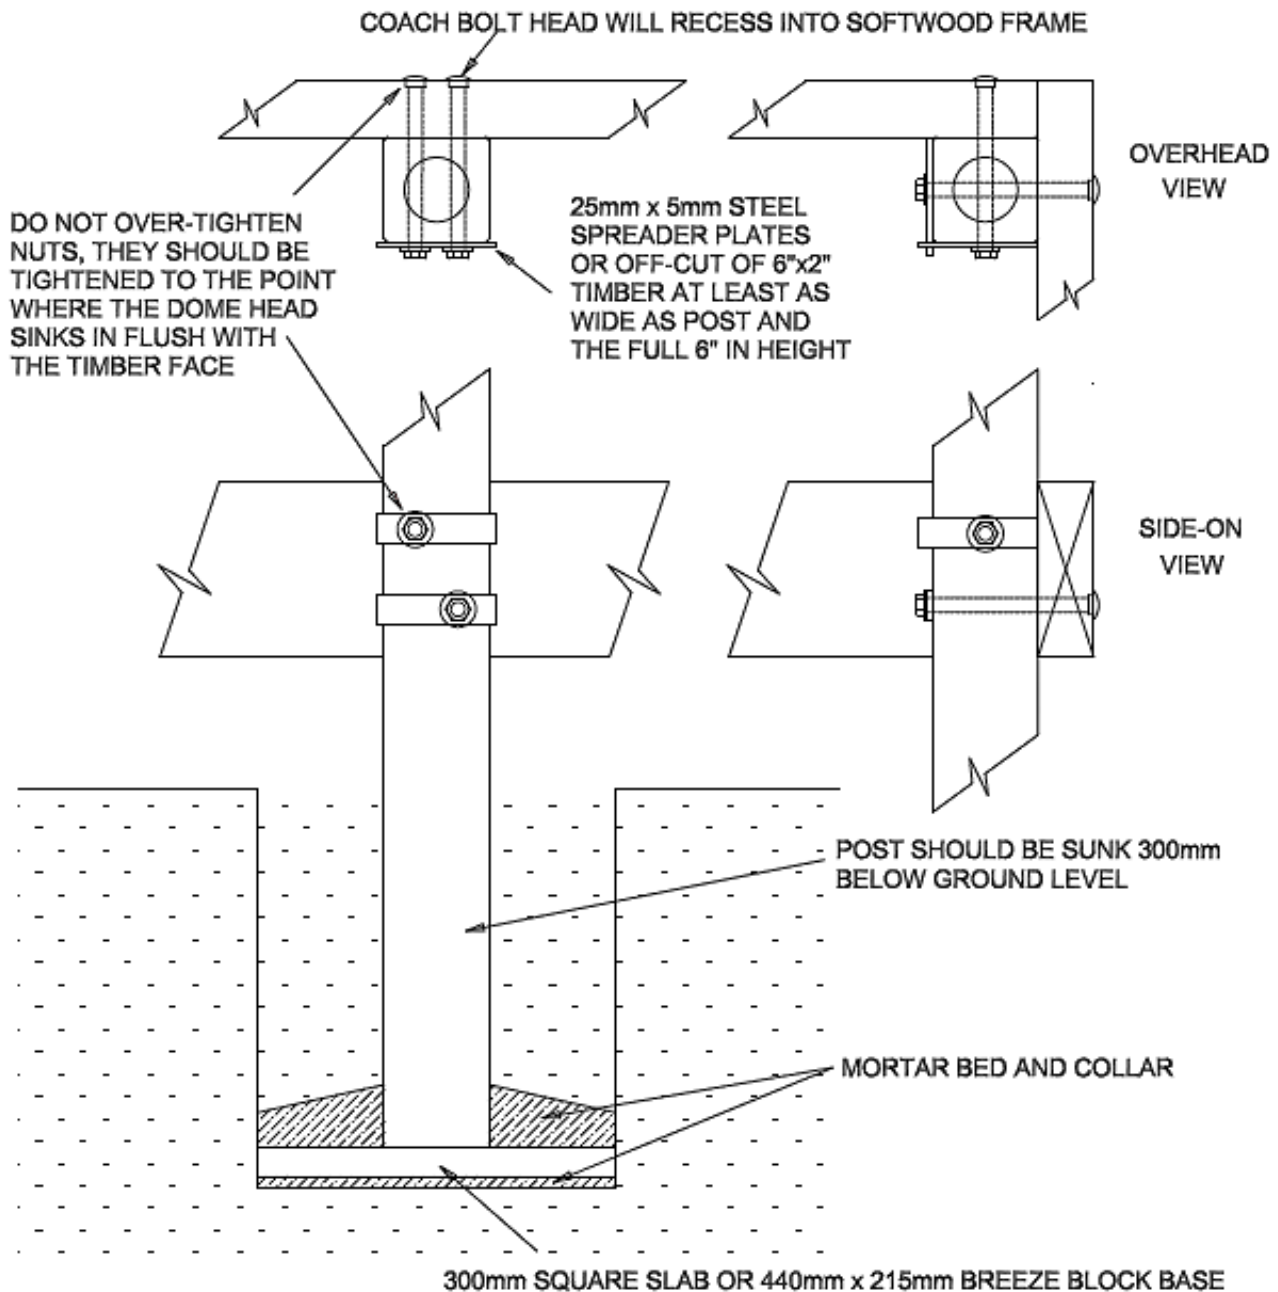

**Special Notes:**

- Use structural Grade (C16 or C24) pressure treated timbers
- Use good quality M10 or M12 zinc plated coach bolts
- If post over 1.4m in length, then use 2" scaffold pole down the centre of the post (pole must come to within 500mm of the top of the post).

**ecodek Unit 13 Abenbury Way Wrexham Industrial Estate Wrexham LL13 9UZ**  
**Tel: 01978 667 840 Fax: 01978 667 857 Email: [enquiries@ecodek.co.uk](mailto:enquiries@ecodek.co.uk) Visit: [www.ecodek.co.uk](http://www.ecodek.co.uk)**