


Post Fixing Installation Information

How to fit ecodek® hollow post to 6" x 2" softwood frame.

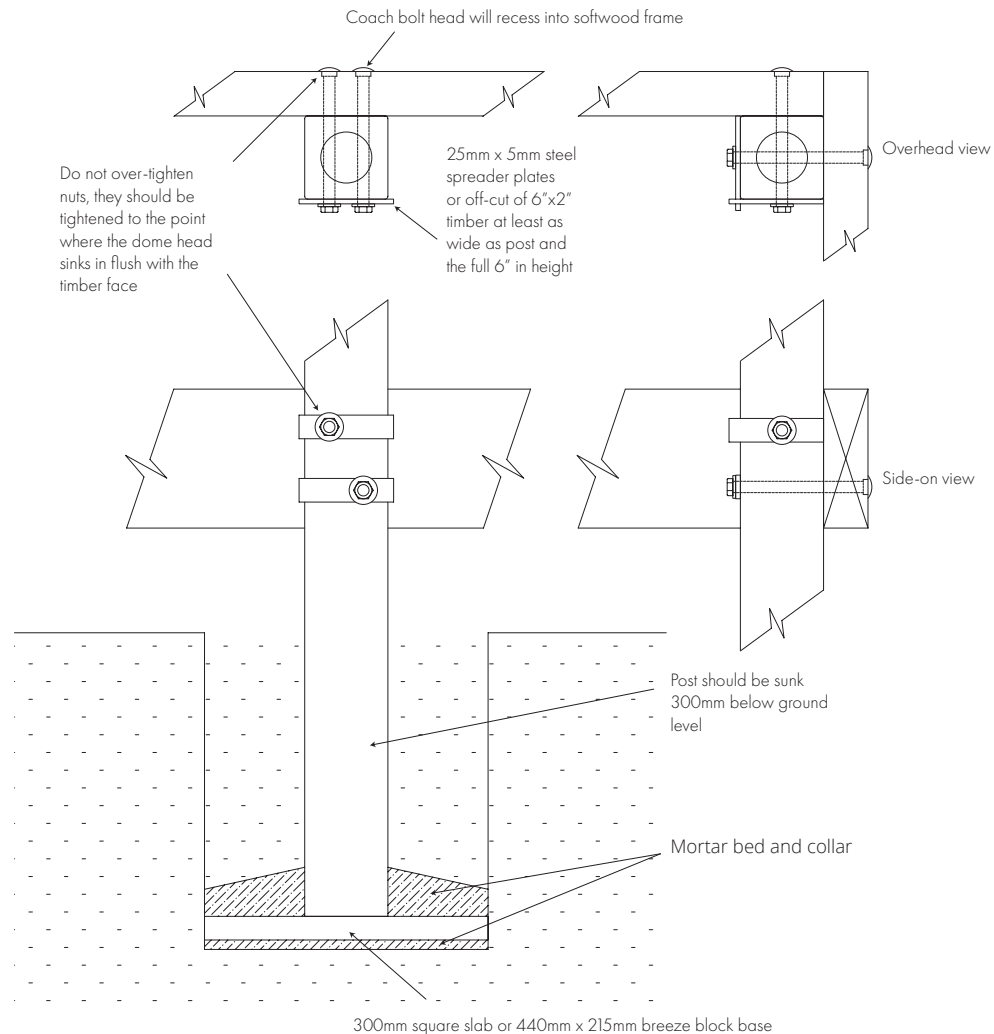

Special Notes:

- Use structural Grade (C16 or C24) pressure treated timbers.
- Use good quality M10 or M12 zinc plated coach bolts.
- If post over 1.4m in length, then use 2" scaffold pole down the centre of the post (pole must come to within 500mm of the top of the post).